


Windows Vista users



When you install the Monitor Driver, resolution and frequency are automatically set to the Monitor. So you can work on the clearer display. Monitor Driver CD (or diskette) will be provided for the 17-inch or higher Model (higher than 70kHz)with LCD. If your monitor is not the one above or you lost the CD (or diskette) , you can download the driver on <http://www.lge.com>

STEP

1. Click on **Start**, then click **Control Panel**. Double click on **Personalization**.

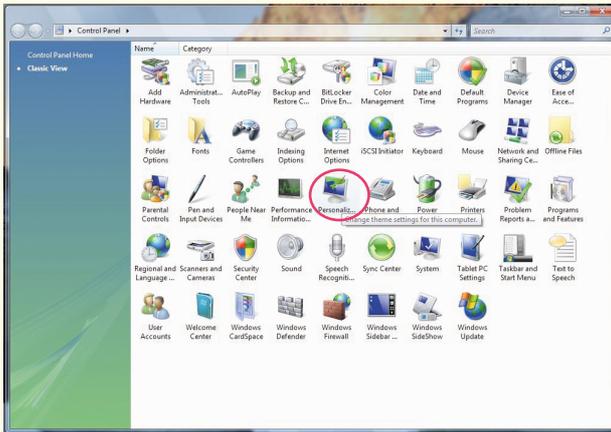


2. Select the **Display Settings** and Click on **Advanced...**

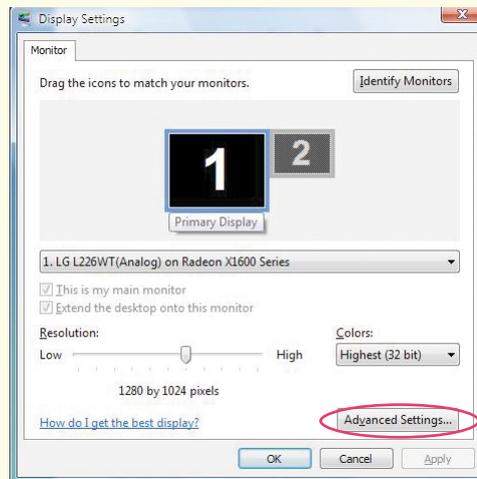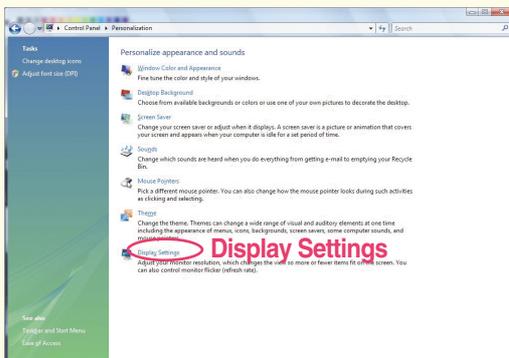

Advanced Settings

3. Select the **Monitor** tab and Click on **Properties**.

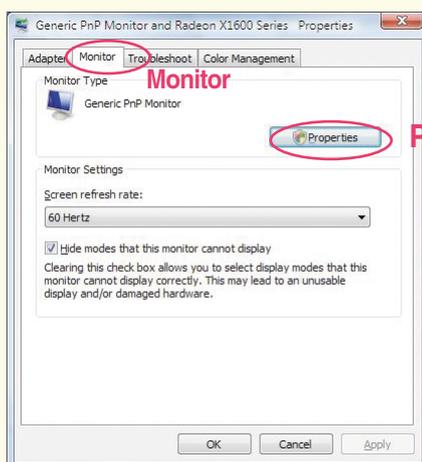


Windows Vista users

4. Click on **Driver** tab and Click on **Update Driver...**





5. (1) Select the **Search automatically for updated driver software** option and click.

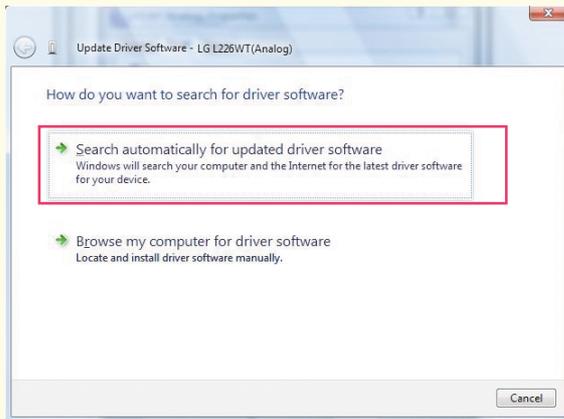

Driver file will be installed automatically.

Click on **Close**.

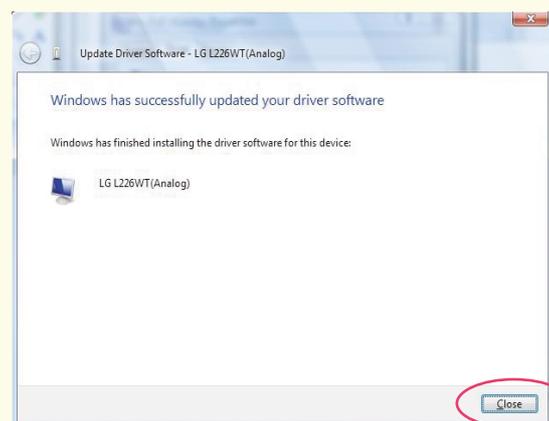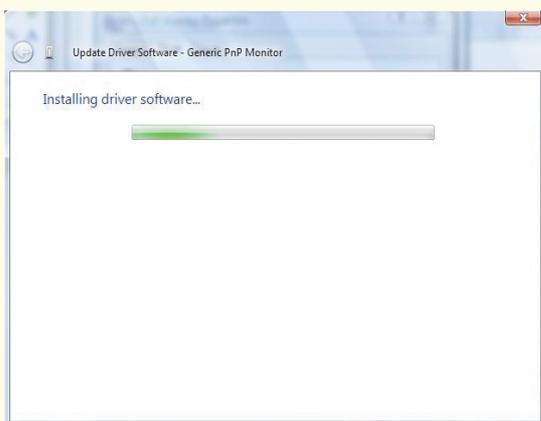

Close

Install was completed.


Important




If LG model name is not displayed after automatic installation by [Search automatically for updated driver software], please install by [Browse my computer for driver software] manually in the following steps.

Windows Vista users

(2) Select the **Browse my computer for driver software** option and click.

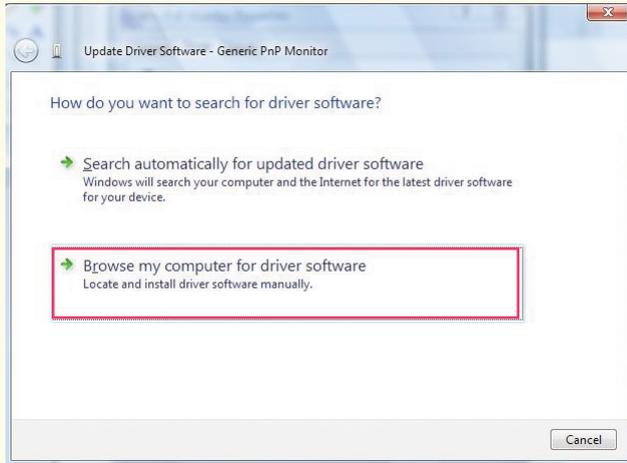

click on **Browse** and click on **Next**.


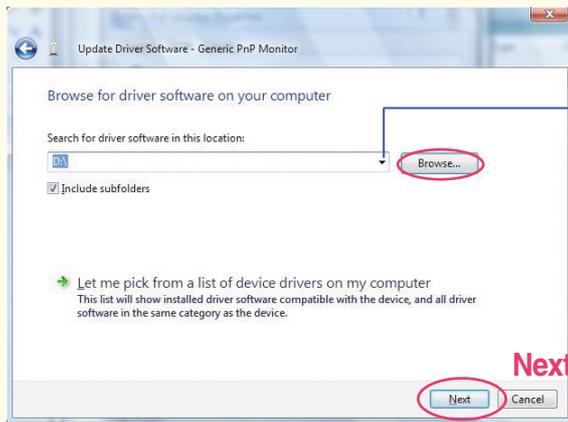


Using the button, Select the correct drive.
ex)CD → D: ⚡(E: ⚡ ...)

Find and open the *.INF file on your CD-ROM (or diskette) (under the \Driver (Windows...) directory) and click on **OK**.

Driver file will be installed automatically.


Click on **Close**.

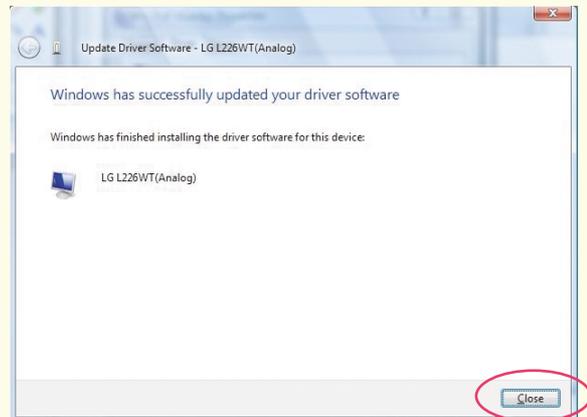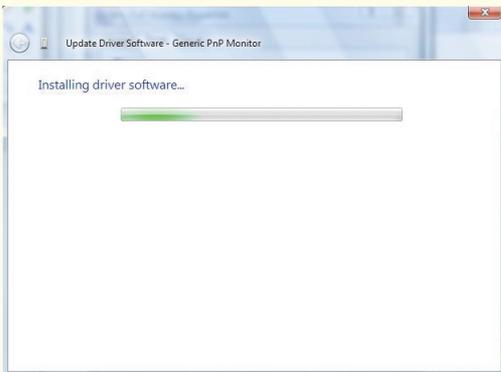

Windows Vista users

Important Notice

This message may appear several times during the installation of your monitor driver. Click **Install this driver software anyway** to continue (Windows Vista). This action will not harm your monitor or system.

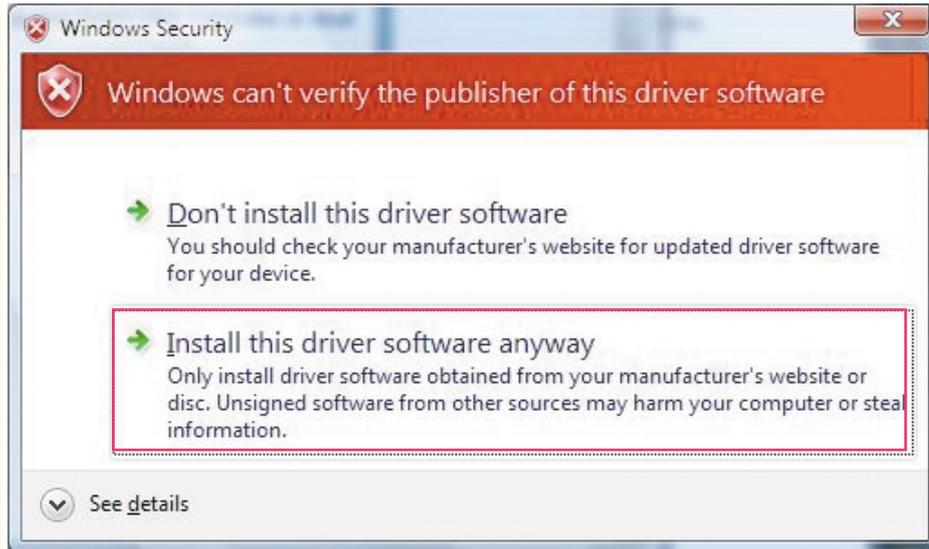


Windows VISTA 사용자를 위한 설치 순서

모니터 드라이버를 설치하면 해상도 및 주파수가 모니터에 맞게 설정되므로 선명한 화면에서 작업하실 수 있습니다.
홈페이지 <http://www.lge.co.kr>에서도 다운받아서 설치하실 수 있습니다.



제공된 CD를 드라이브에 넣으세요.

● 설치 순서


1. '시작' → '제어판' → '개인설정' 클릭

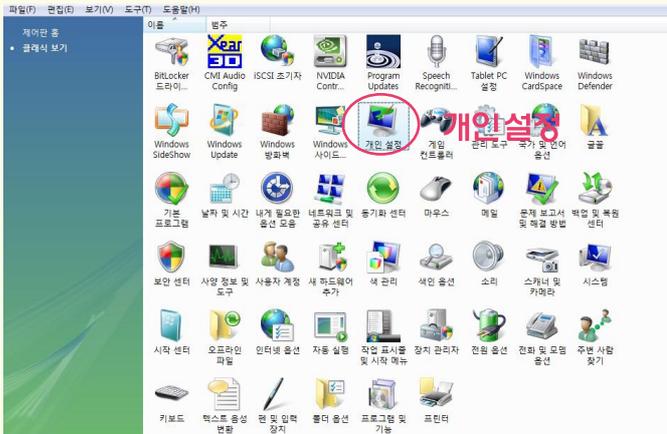

2. '디스플레이 설정(Y)' → '고급설정(V).....' 클릭

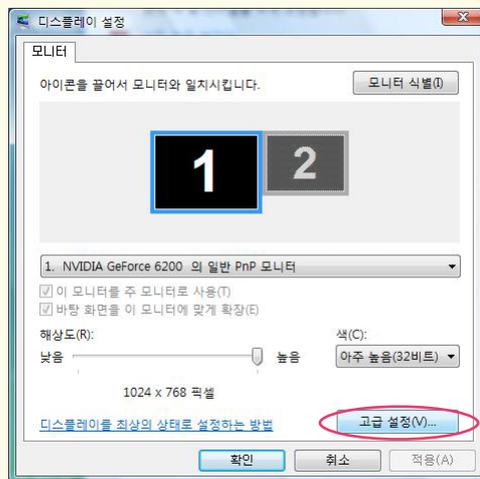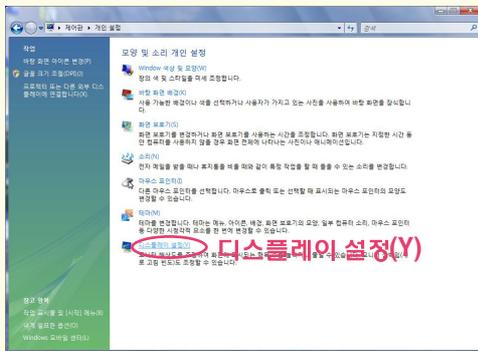


3. '모니터' 클릭 → '속성(P)' 클릭

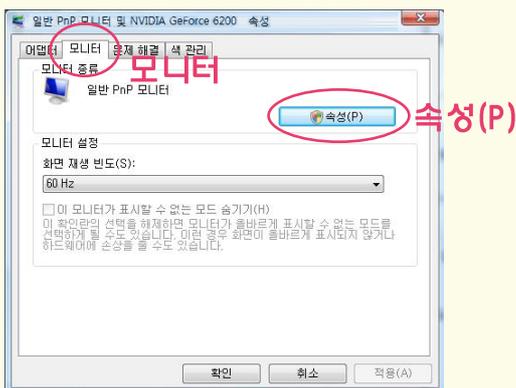


Windows VISTA 사용자를 위한 설치 순서

4. '드라이버' 클릭 → '드라이버 업데이트(P)' 클릭


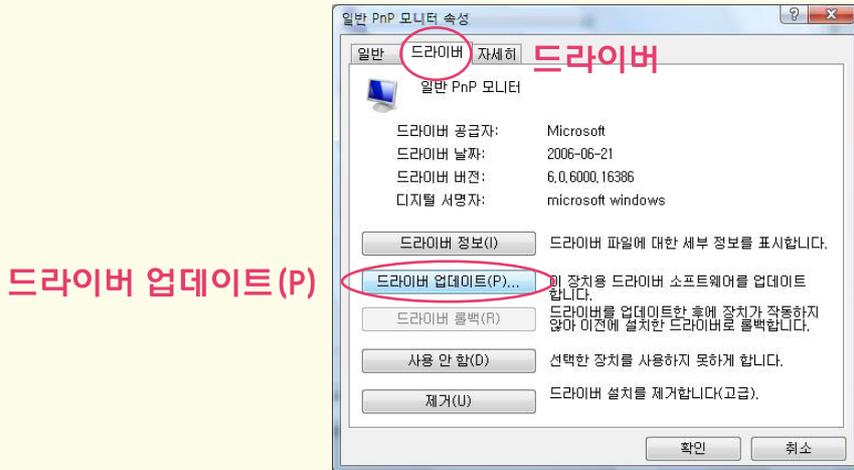


5.(1) '업데이트된 드라이버 소프트웨어 자동으로 검색(S)' 선택

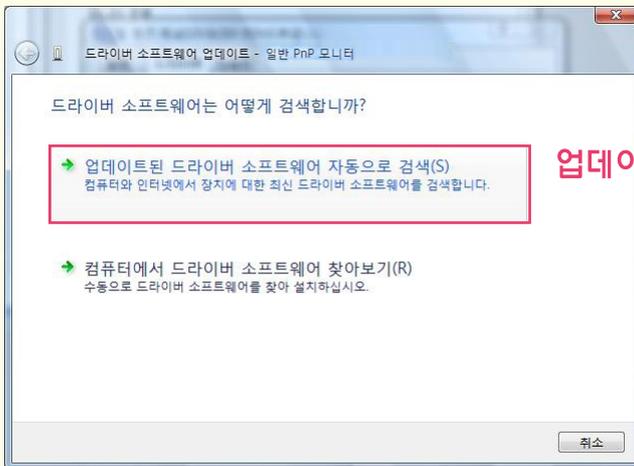

드라이버가 자동으로 설치됩니다.

'닫기' 클릭

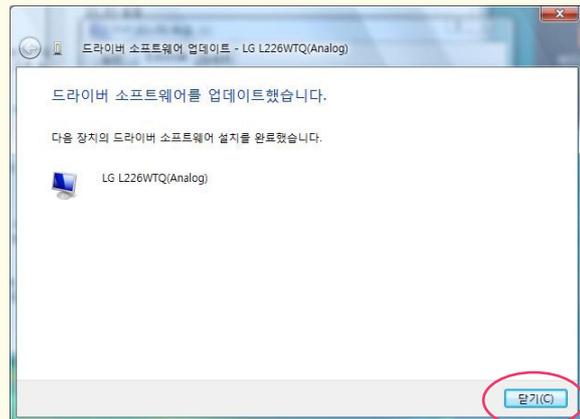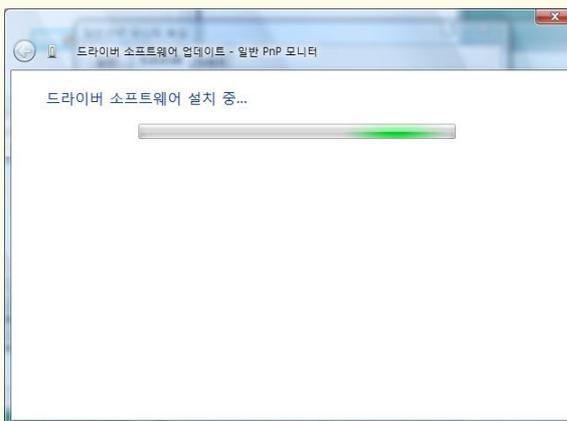

설치가 완료되었습니다.




중요 [업데이트된 드라이버 소프트웨어 자동으로 검색(S)]으로 자동 설치 후, **LG 모델명**이 표시 되지 않으면, 다음과 같은 순서에 따라 [컴퓨터에서 드라이버 소프트웨어 찾아보기(R)] 수동으로 설치하세요.

Windows VISTA 사용자를 위한 설치 순서


(2) '컴퓨터에서 드라이버 소프트웨어 찾아보기(R)' 선택




'찾아보기(R)' 클릭 → '다음(N)' 클릭

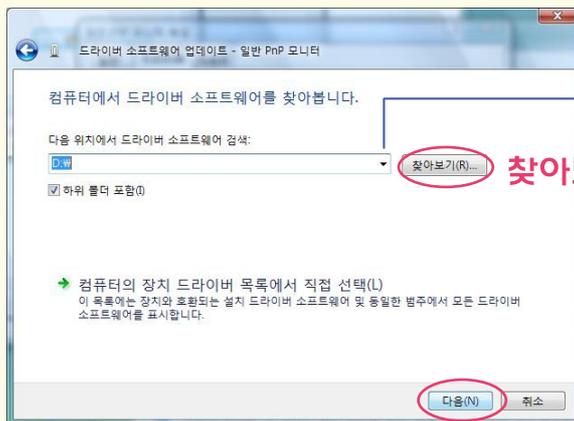

드라이버가 자동으로 설치됩니다.

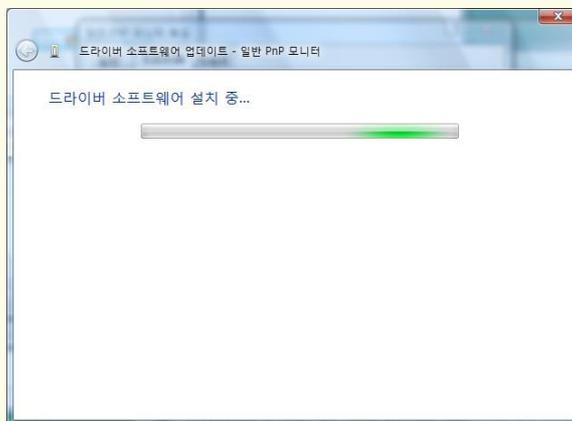

'닫기' 클릭

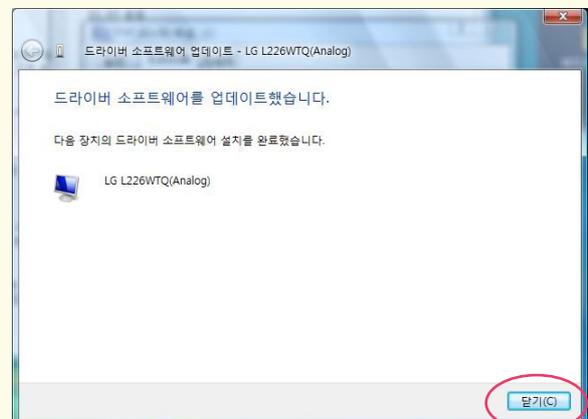

닫기(C)

Windows VISTA 사용자를 위한 설치 순서

[참고]

WINDOWS Vista 드라이버 설치시 아래와 같은 메세지가 뜨는 경우엔 '이 드라이버 소프트웨어를 설치합니다(I)' 를 선택하여 설치를 계속하십시오. 시스템 및 모니터 동작상에는 아무런 영향을 미치지 않습니다.

