

Replacing the Management Module Battery

for the ProCurve Series zl Switches Management Modules

The switch does not have to be powered off to remove the management module, however when the management module is removed all ports will lose communication. ProCurve Networking recommends replacing the battery during scheduled down time.

WARNING

- **The battery requires special handling at end-of-life. The battery can explode or cause burns if disassembled, charged, or exposed to water, fire or high temperature. After replacing the battery, properly dispose of used battery according to instructions.**
 - **There is a risk of explosion if the battery is replaced by an incorrect type. Ensure to replace the battery with the same type.**
 - **To avoid shorting of battery, remove and properly dispose of battery before returning the Management Module for repair.**
-

ATTENTION

Il y a danger d'explosion s'il y a remplacement incorrect de la batterie.


Remplacer uniquement avec une batterie du même type ou d'un type équivalent recommandé par le constructeur.

Mettre au rebut les batteries usagées conformément aux instructions du fabricant.


1. Using either a flat-bladed or Torx T-10 screwdriver loosen the retaining screws securing the management module. (You cannot access the battery when the management module is installed.)
2. Using the extractor handles, pull the module out from the slot.
3. Remove the old battery. Dispose of properly.
4. Insert the new battery with the lettering and the plus “+” sign facing up.
5. Re-install the module into the switch.
6. Use an equal amount of pressure and push both extractor handles closed to completely seat the module.
7. Tighten the retaining screws.

The 5400zl and 8200zl Management Modules look different, however they are both located in the upper right corners or their respective chassis.


1.

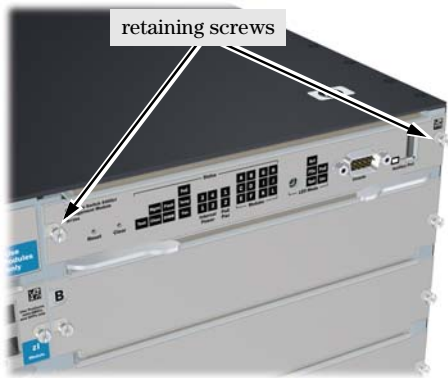


2.

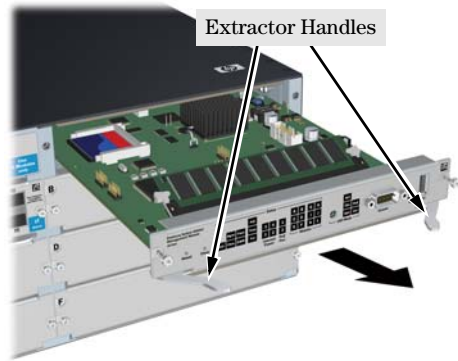

3.

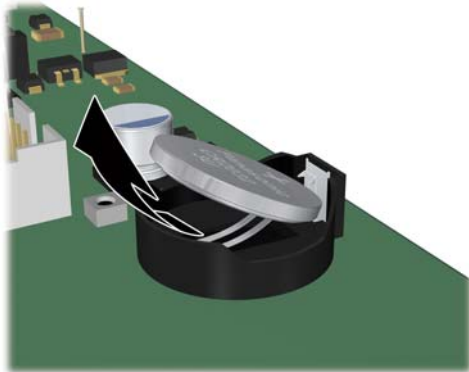

4.

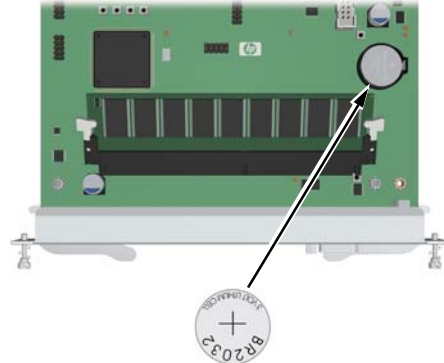

© Copyright 2006, 2007 Hewlett-Packard Development Company, LP. All rights reserved. The information contained herein is subject to change without notice.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard.

Technical information in this document is subject to change without notice.

PartNumber: 5991-8550
August 2007

