



Appendix 8.3.3 Verify the Firmware and Driver Versions

A.1 Access Point Verification

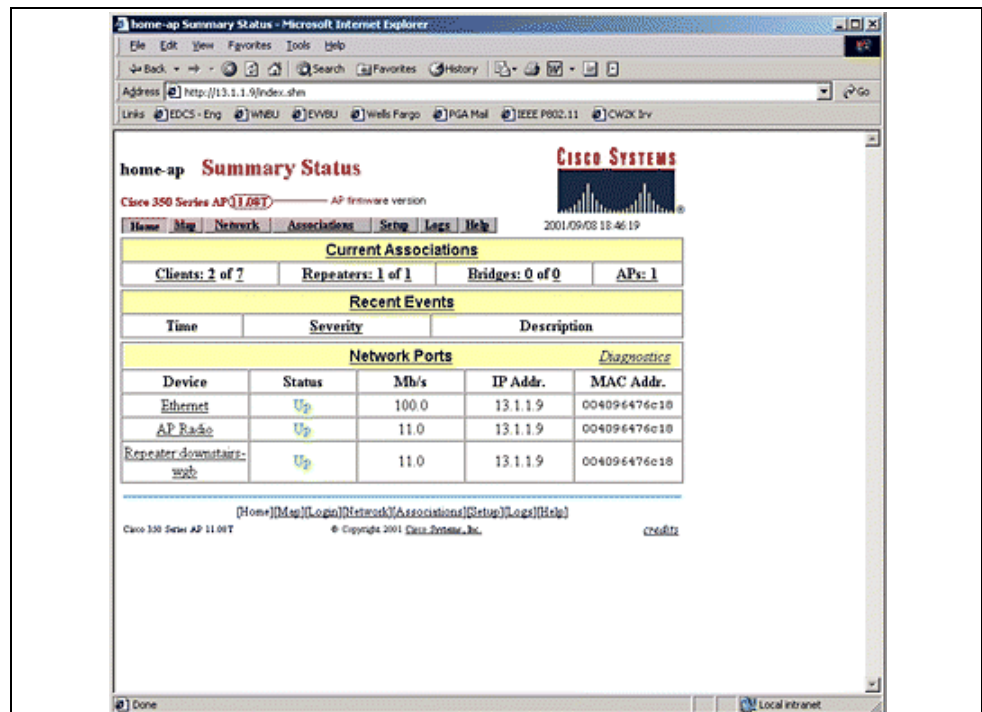


Figure [1]: AP Firmware Location using HTTP

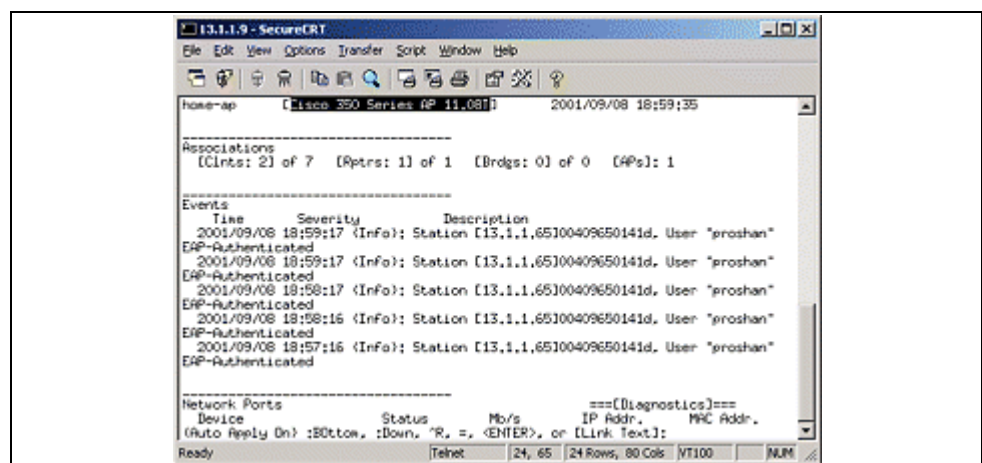


Figure [2]: AP Firmware Location using Telnet/Console

- Step 1** Browse, Telnet, or console to the access point.
- Step 2** Refer to Figure [1], for HTTP Access Point (AP) firmware version confirmation.
- Step 3** Refer to Figure [2], for Telnet/Console AP firmware version confirmation.

A.2 Workgroup Bridge Verification

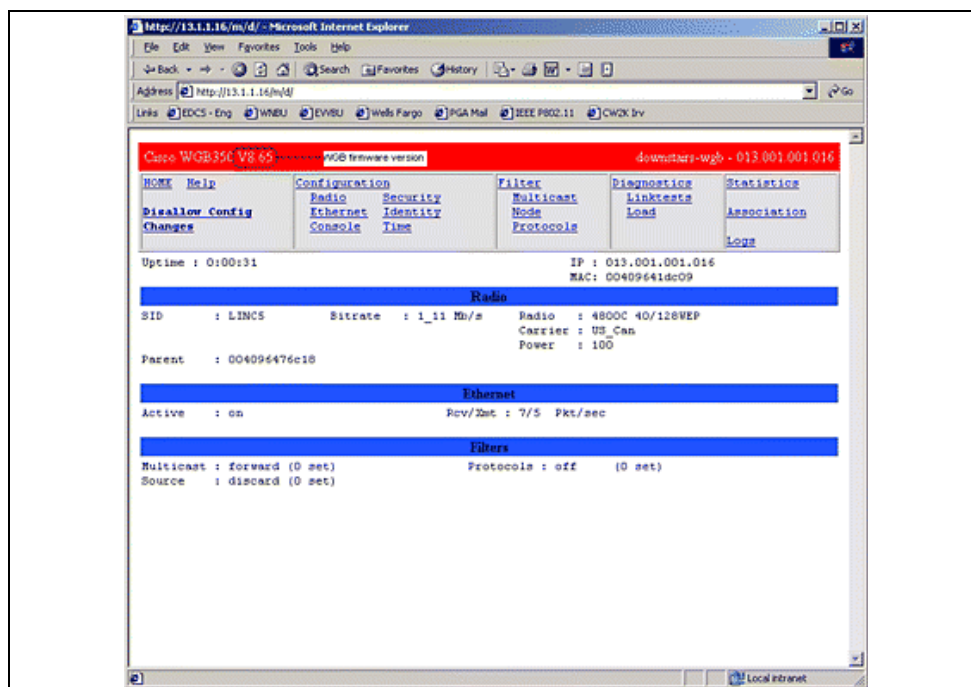


Figure [3]: Workgroup Bridge Firmware Location using HTTP

- Step 4** Browse to the Workgroup Bridge.
- Step 5** Refer to Figure [3], for HTTP Workgroup Bridge firmware version confirmation.

A.3 Client Verification – Aironet Client Utilities (ACU)

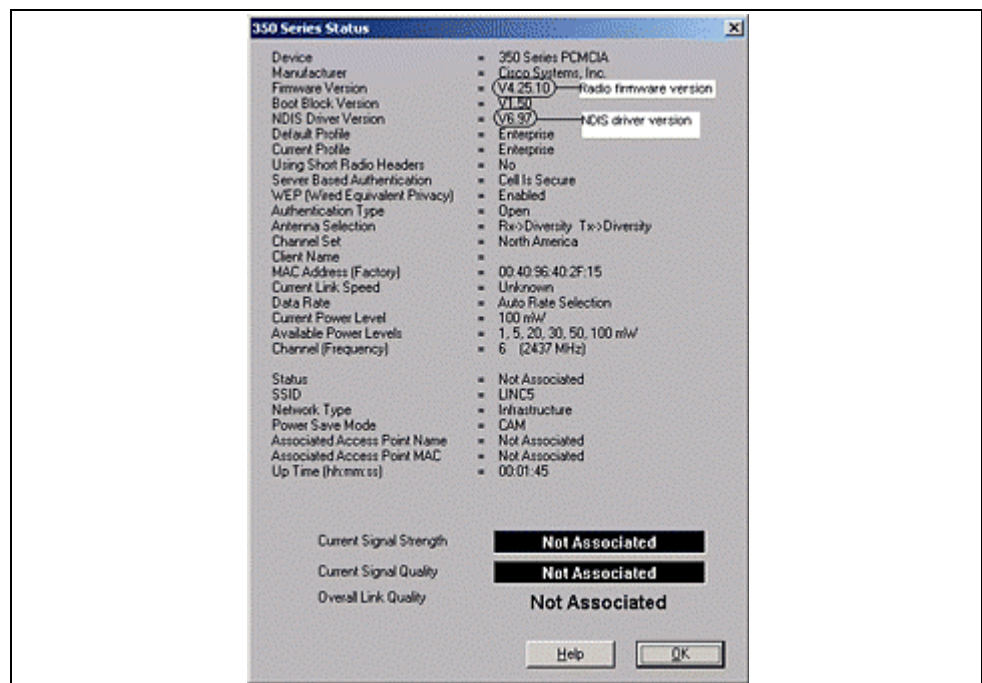


Figure [4]: Client Radio Firmware and NDIS Driver Version



Figure [5]: Client ACU Version

This section will provide information for determining the Aironet Client Utilities (ACU) version, for Versions 4.15 and 5.01 to determine ACU Versions ACU 4.15.

Use the following procedures to determine the versions of ACU client firmware, driver, and software that are running:

- Step 1** Open the ACU.
- Step 2** Select the **Commands** drop-down menu.
- Step 3** Click on **Status**.
- Step 4** Refer to Figure [4], for ACU Client firmware and driver version confirmation.
- Step 5** In the **Status** window, click on **OK** to close the window.
- Step 6** Select the **Help** drop down menu.
- Step 7** Click on **About Aironet Client Utility**.

Step 8 Refer to Figure [5], for the ACU version.

Determining ACU Versions – ACU 5.01

Use the following procedures to determine the versions of ACU client firmware, driver, and software that are running:

Step 1 Open the ACU.

Step 2 Click on the **Status** toolbar button.

Step 3 Refer to Figure [4], for ACU Client firmware and driver version confirmation.

Step 4 In the **Status** window, click on **OK** to close the window.

Step 5 Click on the **About** toolbar button.

Step 6 Refer to Figure [5], for the ACU version.

A.4 Windows CE Verification

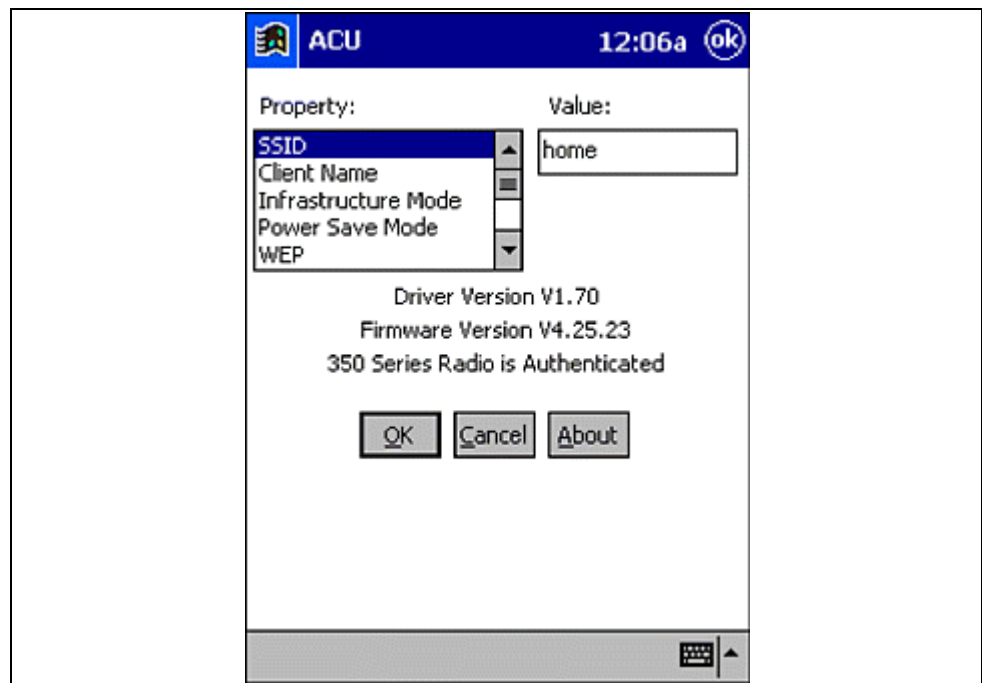


Figure [6]: Windows CE ACU

Launch the Aironet Client Utilities on the Windows CE device, the screen that appears is shown in Figure [6].