

Appendix 8.4.4a Enabling Cisco LEAP for ACU 4.15.006

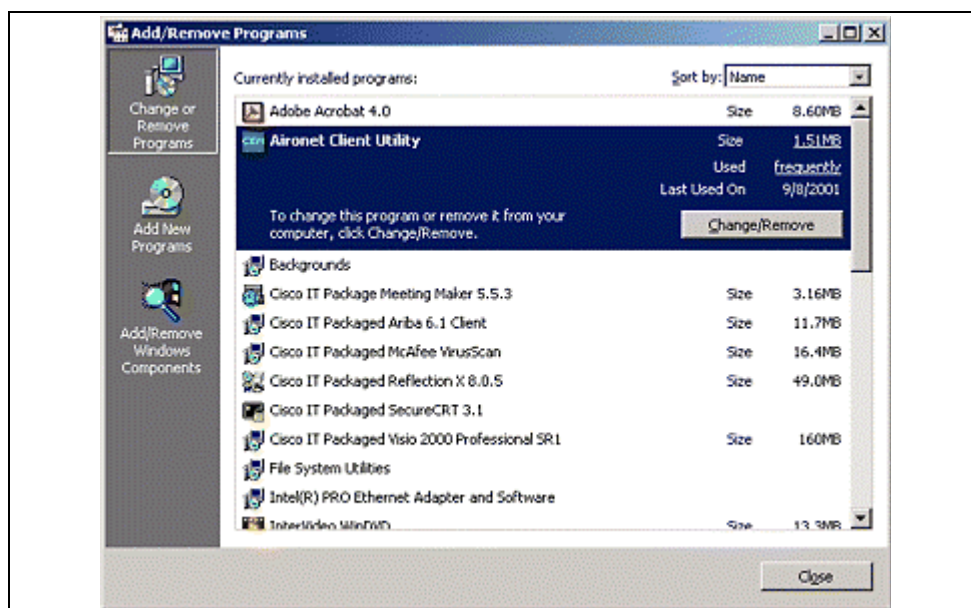


Figure [1]: Enabling Cisco LEAP in the ACU Configuration

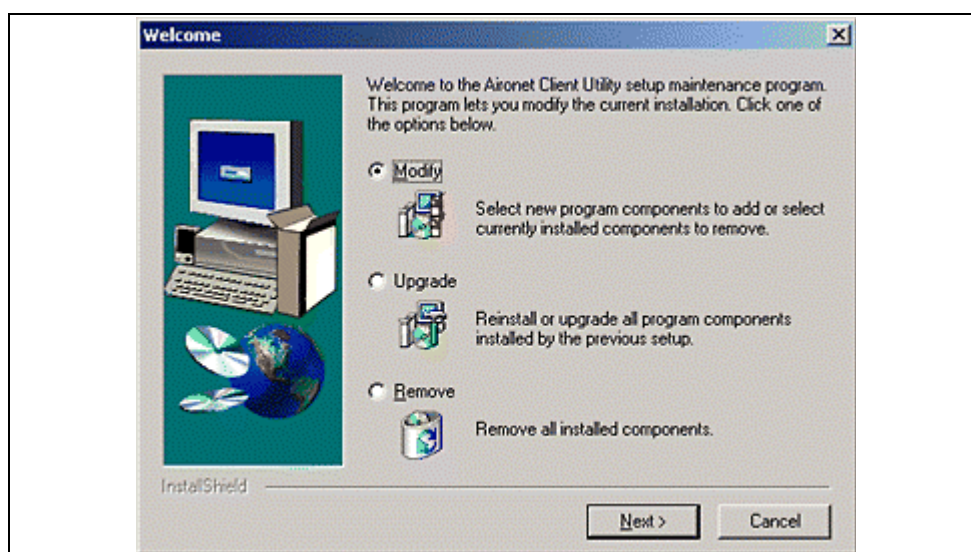


Figure [2]: Modifying the ACU Configuration

If the Aironet Client Utility (ACU) was installed without enabling Cisco Lightweight Extensible Authentication Protocol (LEAP), the LEAP option will be disabled. To enable LEAP, the ACU must be reconfigured. The following procedure can be used to reenable LEAP:

- Step 1** Open the Windows **Control Panel**.
- Step 2** Click on **Add/Remove Programs**.
- Step 3** Scroll to the **Aironet Client Utility**.
- Step 4** Click on the **Change/Remove** button as shown in Figure [1].
- Step 5** At the **Welcome** window, select the **Modify** radio button and click **Next>**, as shown in Figure [2].
- Step 6** Select the **LEAP** radio button and click the **Next>** button.
- Step 7** Select which components to install and click the **Next>** button.
- Step 8** Select the **Start Menu** folder to install ACU into, and click the **Next>** button.
- Step 9** If prompted to restart the system, do so.