Replacement Fan Tray Instructions


for the ProCurve Series zl Switches

The fan tray is hot swappable. It can be removed and replaced without removing power from the switch. However, install the new fan tray immediately (within two minutes) after removing the old fan tray to avoid overheating and a switch shutdown (within three minutes).


- 1. Release the retaining screws
- 2. Grasp the handle and remove the old fan tray
- 3. Install the new fan tray
- 4. Tighten the retaining screws

WARNING

To avoid contact with spinning fans, if you are hot swapping out the fan tray assembly, pull the assembly out one-inch and allow the fans to stop rotating (approximately 20 seconds) before pulling it all the way out.

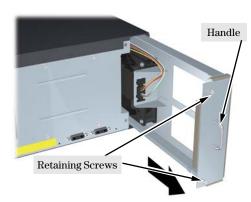



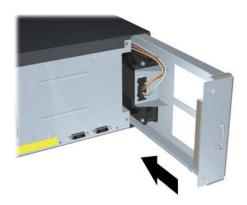

ProCurve Networking

HP Innovation



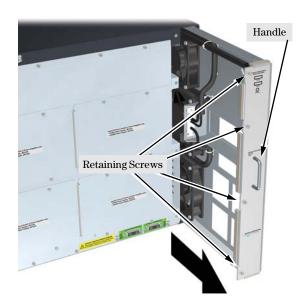


Figure 3. 8212 Fantray being removed



Figure 4. 8212 Fantray being installed

© Copyright 2007 Hewlett-Packard Development Company, LP. All rights reserved. The information contained herein is subject to change without notice.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard.

Technical information in this document is subject to change without notice.



Part Number: 5991-8554 August 2007 Printed in Singapore

